

## FRONT BRAKE DRUMS

ATLAS P/N	QTY REQ	A-BODY	B-BODY	E-BODY	C/Y-BODY
862-305 RH DRUM/HUB	1		1960-61		1960-61
862-306 LH DRUM/HUB	1		w/ 11"x2½" brakes		w/ 11" brakes
862-319 RH DRUM/HUB	1				1962
862-320 LH DRUM/HUB	1				w/ 11" brakes
962-016 RH DRUM/HUB	1				1960-62
962-017 LH DRUM/HUB	1				IMPERIAL
962-032 RH DRUM/HUB	1		1960-61		
962-033 LH DRUM/HUB	1		w/ 11"x2" brakes		
962-049 RH DRUM/HUB	1	1960-70			
962-050 LH DRUM/HUB	1	w/ 9" brakes			
862-231 DRUM ONLY	2				
962-022 RH DRUM/HUB	1		1962-66		
962-023 LH DRUM/HUB	1		w/ 10" brakes		
862-099 DRUM ONLY	2		1967-68		
			w/ 10" comp brakes		
962-020 RH DRUM/HUB	1		1960-62		1960-62
962-021 LH DRUM/HUB	1		w/ 12" brakes		w/ 12" brakes exc IMPERIAL
962-030 RH DRUM/HUB	1				1963-65
962-031 LH DRUM/HUB	1				w/ 11"x13" brakes exc IMPERIAL
862-296 DRUM ONLY	2				
962-034 RH DRUM/HUB	1				1963-1964
962-035 LH DRUM/HUB	1				all IMPERIAL
962-005 RH DRUM/HUB	1	1964-69			
962-006 LH DRUM/HUB	1	w/ 10" brakes			
862-101 DRUM ONLY	2				
962-036 RH DRUM/HUB	1				1965-66
962-037 LH DRUM/HUB	1				all IMPERIAL
962-024 RH DRUM/HUB	1		1967-68	1970	
962-025 LH DRUM/HUB	1		w/ 10" full cast drum	w/ 10" brakes	
862-270 DRUM ONLY	2		1969-70		
			w/ 10" brakes		
962-038 DRUM/HUB	2		1971-72	1971-72	
			w/ 10" brakes	w/ 10" brakes	
962-049 DRUM/HUB	2	1971-74			
862-231 DRUM ONLY	2	w/ 9" brakes			
962-057 RH DRUM/HUB	1	1970			
962-058 LH DRUM/HUB	1	w/ 10" brakes			
862-101 DRUM ONLY	2				
962-059 DRUM/HUB	2	1971-72			
862-101 DRUM ONLY	2	w/ 10" brakes			
962-060 DRUM/HUB	2	1973-74			
862-282 DRUM ONLY	2	w/ 10" brakes			
962-061 RH DRUM/HUB	1				1965-69
962-062 LH DRUM/HUB	1				w/ 11"x2.75" drum
862-64 DRUM ONLY	2				
962-063 RH DRUM/HUB	1		1963-67		
962-064 LH DRUM/HUB	1		w/ 11" brakes		
862-296 DRUM ONLY	2		1968		
			w/ 11" comp drum		
862-298 RH DRUM/HUB	1		1968	1970	
862-299 LH DRUM/HUB	1		w/ 11" full cast drum	w/ 11" brakes	
862-065 DRUM ONLY	2		1969-70		
			w/ 11" brakes		

## REAR BRAKE DRUMS

ATLAS P/N	QTY REQ	A-BODY	B-BODY	E-BODY	C/Y-BODY
962-039 RH DRUM/HUB 962-040 LH DRUM/HUB	1 1		1960-62 w/ 12" brakes		1960-62 w/ 12" brakes exc IMPERIAL
862-388 RH DRUM/HUB 862-389 LH DRUM/HUB	1 1				1960-62 IMPERIAL
862-089 BRAKE DRUM	2	1960-74 w/ 9" brakes			
862-364 RH DRUM/HUB 862-365 LH DRUM/HUB	1 1		1960-61 w/ 11" x 2" brakes		
962-014 RH DRUM/HUB 962-015 LH DRUM/HUB 862-231 DRUM ONLY	1 1 2		1960-61 w/ 11" x 2 1/2" brakes		1960-61 w/ 11" brakes
862-407 RH DRUM/HUB 862-408 LH DRUM/HUB 862-099 DRUM ONLY	1 1 2		1962-64 all B-BODY		
862-275 BRAKE DRUM	2	1965-72 w/ 10" brakes			
862-367 RH DRUM/HUB 862-368 LH DRUM/HUB 862-366 DRUM ONLY	1 1 2				1963-64 w/ 11" x 3" brakes exc IMPERIAL
862-427 RH DRUM/HUB 862-428 LH DRUM/HUB	1 1				1963-64 IMPERIAL
862-366 BRAKE DRUM	2				1965-69 w/ 11" x 2" brakes
862-279 BRAKE DRUM	2				1965-69 w/ 11" x 2" brakes
862-371 BRAKE DRUM	2				1965-69 w/ 11" x 2 1/2" (plain)
862-378 BRAKE DRUM	2				1965-66 IMPERIAL
862-421 BRAKE DRUM	2				1967-70 IMPERIAL
862-271 BRAKE DRUM	2	1973-74 w/ 10" brakes	1965-74 w/ 10" brakes	1970-74 w/ 10" brakes	
862-278 BRAKE DRUM	2		1969-70 w/ 11" brakes	1970 w/ 11" brakes	1968-71 w/ 11" brakes)
862-289 BRAKE DRUM	2				1969-74 w/ 11" x 2" brakes