


## BATTERY HOLD DOWNS BATTERY TRAYS

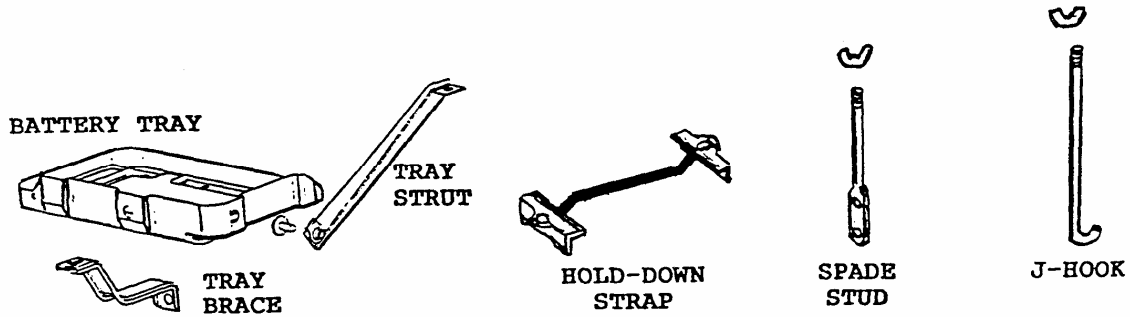

ATLAS P/N	QTY REQ	A-BODY	B-BODY	E-BODY	C/Y-BODY
801-362 HOLD DOWN STRAP	1	1960-62			
925-001 J-HOOK/NUT SET	1	all A-BODY			
701-021 BATTERY TRAY	1				
801-362 HOLD DOWN STRAP	1		1960-61		
725-001 SPADE STUD/NUT	1		all B-BODY		
925-002 J-HOOK/NUT SET	1				
701-019 BATTERY TRAY/SUPRT	1				
801-362 HOLD DOWN STRAP	1		1962-65		
925-001 J-HOOK/NUT SET	1		all B-BODY		
701-022 BATTERY TRAY	1				
824-054 BRACE	1				
801-362 HOLD DOWN STRAP	1	1963-66			
925-001 J-HOOK/NUT SET	1	all A-BODY			
801-214 BATTERY TRAY	1				
801-009 HOLD DOWN STRAP	1				1965-69
825-028 J-HOOK/NUT SET	1				exc IMPERIAL
801-042 BATTERY TRAY	1				
801-021 HOLD DOWN STRAP	1		1966-69		
925-001 J-HOOK/NUT SET	1		all B-BODY		
801-094 BATTERY TRAY	1				
824-053 UPPER TRAY STRUT	1				
824-054 LOWER TRAY BRACE	2				
801-021 HOLD DOWN STRAP	1				1967-69
925-001 J-HOOK/NUT SET	1				IMPERIAL
801-094 BATTERY TRAY	1				
801-021 HOLD DOWN STRAP	1	1967-69			
925-002 J-HOOK/NUT SET	1	all A-BODY			
801-093 BATTERY TRAY	1				
824-145 BRACE	1				
801-040 HOLD DOWN STRAP	1		1970		
925-002 J-HOOK/NUT SET	1		all B-BODY		
824-003 BATTERY TRAY	1				
824-054 LOWER TRAY BRACE	1				
801-040 HOLD DOWN STRAP	1	1970-74			
925-002 J-HOOK/NUT SET	1	all A-BODY			
801-093 BATTERY TRAY	1				
824-145 BRACE	1				
801-040 HOLD DOWN STRAP	1		1971	1970-71	
925-002 J-HOOK/NUT SET	1		all B-BODY	all E-BODY	
824-003 BATTERY TRAY	1				
824-055 LOWER TRAY BRACE	1				

**BATTERY HOLD-DOWNS  
BATTERY TRAYS  
(CONT'D)**

ATLAS P/N	QTY REQ	A-BODY	B-BODY	E-BODY	C/Y-BODY
801-040 HOLD DOWN STRAP	1		1971	1970-71	
925-002 J-HOOK/NUT SET	1		all B-BODY	all B-BODY	
824-003 BATTERY TRAY	1				
824-055 TRAY BRACE	1				
801-161 HOLD DOWN STRAP	1		1972	1972-74	
925-002 J-HOOK/NUT SET	1		all B-BODY	all E-body	
824-003 BATTERY TRAY	1				
824-055 TRAY BRACE	1				
801-092 HOLD DOWN STRAP	1				1970-74
925-002 J-HOOK/NUT SET	1				all C/Y-BODY
801-042 BATTERY TRAY	1				
801-040 HOLD DOWN STRAP	1		1973-74		
925-002 J-HOOK/NUT SET	1		all B-BODY		
801-175 BATTERY TRAY	1				

**JUMP-STARTING WARNING DECALS**

Affixes to radiator core support just in front of battery.

<p><b>BOOSTER OR BATTERY NEG. (-) CABLE MUST GO TO NEG. (-) &amp; POS. (+) TO POS. (+). DISCONNECT BATTERY CABLES BEFORE USING CHARGER.</b></p>
---

ALL 1960-61  
839-074

<p><b>CAUTION</b> <b>BOOSTER OR BATTERY NEG (-) CABLE MUST GO TO NEG(-) &amp; POS(+) TO POS (+) DISCONNECT BATTERY CABLES BEFORE USING CHARGER.</b></p>
---

ALL 1962 AND UP  
839-095