


# Distributor Parts: 6 – Cylinder

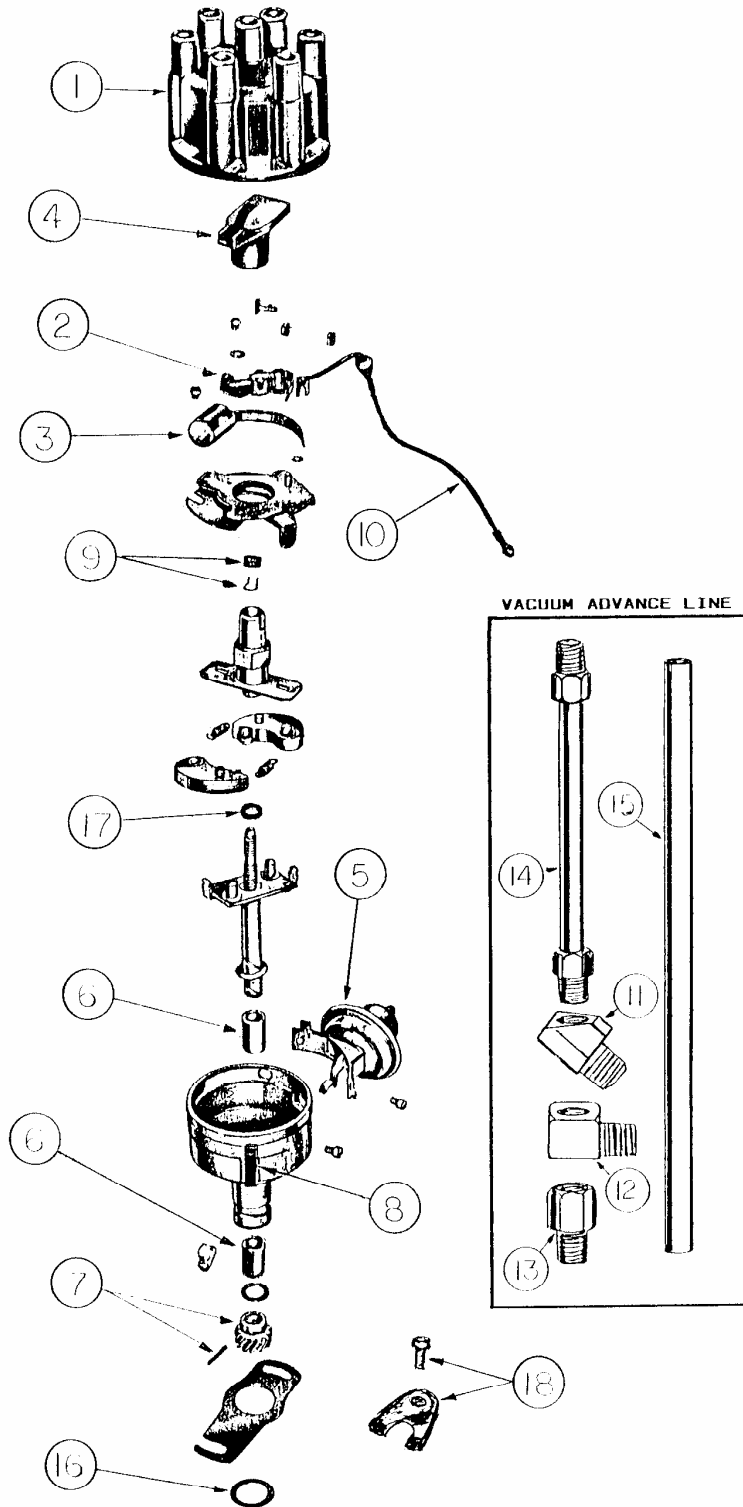

## Distributor Parts: 6 – Cylinder

<b>K E Y</b>	<b>ATLAS P/N</b>	<b>QTY REQ</b>	<b>PLYMOUTH</b>	<b>DODGE</b>	<b>DESOTO</b>	<b>CHRYSLER/ IMPERIAL</b>
1	865-003 Distributor Cap	1	1935-48 all PLYMOUTH 1949 P17 1950 IGS distrib	1935-48 all DODGE 1949 Wayfarer 1950 IGS distrib	1935-48 all DESOTO	1935-48 all CHRYSLER
1	865-004 Distributor Cap	1	1949 P19 1950 IAP distrib	1949 exc Wayfarer 1950 IAP distrib	1949 all DESOTO 1950 IAP distrib	1949 all CHRYSLER 1950 IAP distrib
1	865-009 Distributor Cap	1	1950 IAT distrib 1951-59 all PLYMOUTH	1950 IAT distrib 1951-59 all DODGE	1950 IAT distrib 1951-54 all DESOTO	1950 IAT distrib 1951-54 all CHRYSLER
2	865-018 Contact Set	1	1935-38 all PLYMOUTH	1935-38 all DODGE	1935-38 all DESOTO	1935-38 all CHRYSLER
2	865-014 Contact Set	1	1939-49 all PLYMOUTH 1950 exc IAT distrib	1939-49 all DODGE 1950 exc IAT distrib	1939-49 all DESOTO 1950 exc IAT distrib	1939-49 all CHRYSLER 1950 exc IAT distrib
2	865-016 Contact Set	1	1950 IAT distrib 1951-59 all PLYMOUTH	1950 IAT distrib 1951-59 all DODGE	1950 IAT distrib 1951-54 all DESOTO	1950 IAT distrib 1951-54 all CHRYSLER
3	865-015 Condenser	1	1935-59 all PLYMOUTH	1935-59 all DODGE	1935-59 all DESOTO	1935-59 all CHRYSLER 1955-59 all IMPERIAL
4	865-013 Rotor	1	1935-49 all PLYMOUTH 1950 exc IAT distrib	1935-49 all DODGE 1950 exc IAT distrib	1935-49 all DESOTO 1950 exc IAT distrib	1935-49 all CHRYSLER 1950 exc IAT distrib
4	865-017 Rotor	1	1950 IAT distrib 1951-59 all PLYMOUTH	1950 IAT distrib 1951-59 all DODGE	1950 IAT distrib 1951-54 all DESOTO	1950 IAT distrib 1951-54 all CHRYSLER
5	865-060 Vac Advance	1	1935-41 all PLYMOUTH	1935-41 all DODGE	1935-41 all DESOTO	1935-41 all CHRYSLER
5	865-061 Vac Advance	1	1942-48 all PLYMOUTH 1949 P17 1950 IGS distrib	1942-48 all DODGE 1949 Wayfarer 1950 IGS distrib	1942-48 all DESOTO	1942-48 all CHRYSLER
5	865-062 Vac Advance	1	1949 P19 1950 IAP distrib	1949 exc Wayfarer 1950 IAP distrib	1949 all DESOTO 1950 IAP distrib	1949 all CHRYSLER 1950 IAP distrib
5	865-019 Vac Advance	1	1950 IAT distrib 1951-56 all PLYMOUTH	1950 IAT distrib 1951-56 all DODGE	1950 IAT distrib 1951-54 all DESOTO	1950 IAT distrib 1951-54 all CHRYSLER
5	865-069 Vac Advance	1	1957-59 all PLYMOUTH	1957-59 all DESOTO		
6	961-020 Bushing Set	1	1935-59 all PLYMOUTH	1935-59 all DODGE	1935-54 all DESOTO	1935-54 all CHRYSLER