


## FRONT SUSPENSION

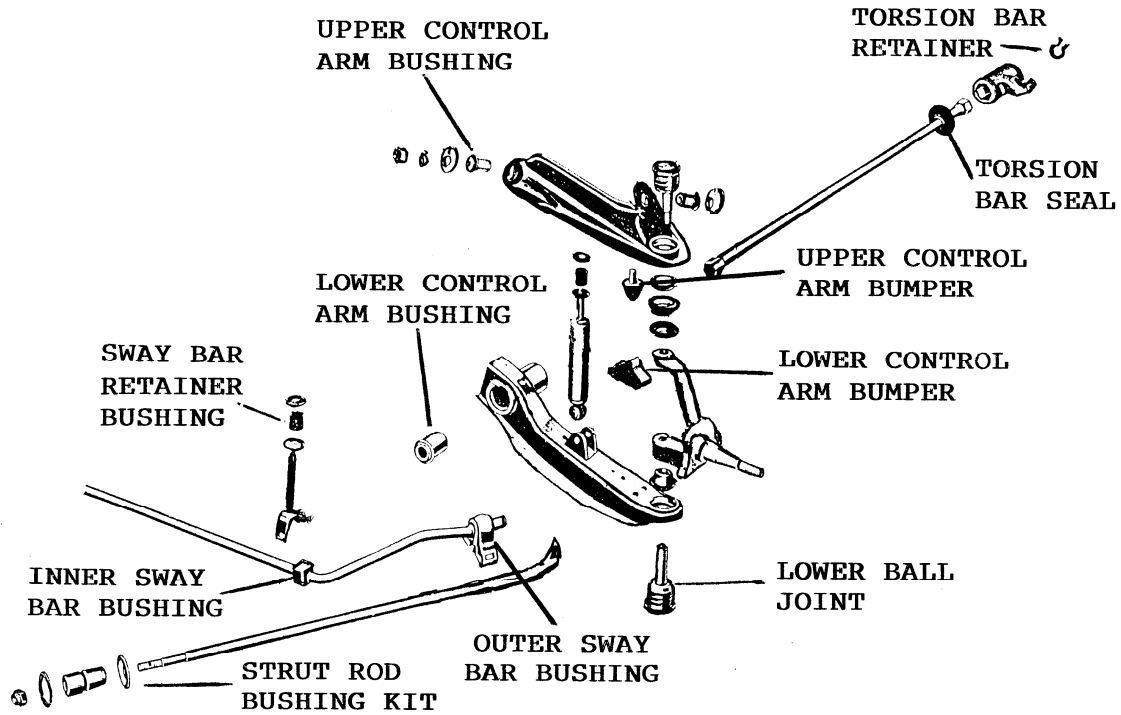

ATLAS P/N	QTY REQ	PLYMOUTH	DODGE	DESOTO	CHRYSLER/ IMPERIAL
860-014 Upper Ball Joint	2	1957-58	1957-58	1957-58	1958
860-015 Lower Ball Joint	2	all PLYMOUTH	all DODGE	Firesweep	Windsor
860-011 U Ctrl Arm Bush	4				
860-012 L Ctrl Arm Bush	2				
960-001 Strut Bush Kit	2				
860-018 U Ctrl Arm Bump	2				
860-019 L Ctrl Arm Bump 1957	2				
860-024 L Ctrl Arm Bump 1958	2				
825-022 Tor Bar Retainer	2				
860-037 SW Bar Ret Bush	2				
860-022 SW Bar Otr Bush	2				
860-023 SW Bar Inr Bush	2				
860-016 Upper Ball Joint	2			1957-58	1957
860-017 Lower Ball Joint	2			exc Firesweep	all CHRYSLER all IMPERIAL
860-021 U Ctrl Arm Bush	4				1958
860-013 L Ctrl Arm Bush	2				exc Windsor
960-001 Strut Bush Kit	2				
860-018 U Ctrl Arm Bump	2				
860-019 L Ctrl Arm Bump (1957)	2				
860-024 L Ctrl Arm Bump (1958)	2				
825-023 Tor Bar Retainer	2				
860-037 SW Bar Ret Bush	2				
860-022 SW Bar Otr Bush	2				
860-023 SW Bar Inr Bush	2				

## FRONT SUSPENSION (CONT'D)

ATLAS P/N	QTY REQ	PLYMOUTH	DODGE	DESOTO	CHRYSLER/ IMPERIAL
860-014 Upper Ball Joint	2	1959	1959-60	1959	1959
860-015 Lower Ball Joint	2	all PLYMOUTH	all DODGE	Firesweep	Windsor
860-020 U Ctrl Arm Bush	4				
860-012 L Ctrl Arm Bush	2				
960-001 Strut Bush Kit	2				
860-039 U Ctrl Arm Bump	2				
860-024 L Ctrl Arm Bump	2				
825-023 Tor Bar Retainer	2				
860-037 SW Bar Ret Bush	2				
860-022 SW Bar Otr Bush	2				
860-023 SW Bar Inr Bush	2				
806-003 Torsn Bar Seal	2				
860-016 Upper Ball Joint	2			1959	1959
860-017 Lower Ball Joint	2			exc Firesweep	exc Windsor
860-020 U Ctrl Arm Bush	4				
860-013 L Ctrl Arm Bush	2				
960-001 Strut Bush Kit	2				
860-039 U Ctrl Arm Bump	2				
860-024 L Ctrl Arm Bump	2				
825-022 Tor Bar Retainer	2				
860-037 SW Bar Ret Bush	2				
860-022 SW Bar Otr Bush	2				
860-023 SW Bar Inr Bush	2				
806-003 Torsn Bar Seal	2				