



## COWL VENT SEALS

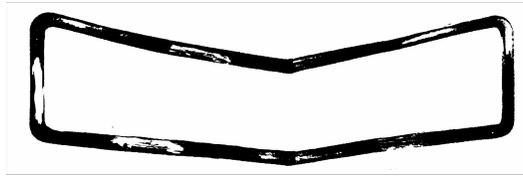


ATLAS P/N	QTY REQ	PLYMOUTH	DODGE	DESOTO	CHRYSLER/ IMPERIAL
706-191 Cowl Vent Seal	1	1933 all PLYMOUTH	1933 all DODGE	1933 all DESOTO	1933 all CHRYSLER
706-192 Cowl Vent Seal	1	1933 all PLYMOUTH	1934-38 all DODGE	1934-38 all DESOTO	1934-38 exc Airflow
706-193 Cowl Vent Seal	1				1934-37 Airflow
706-194 Cowl Vent Seal	1	1939 all PLYMOUTH	1939 all DODGE	1939 all DESOTO	1939 all CHRYSLER
706-195 Cowl Vent Seal	1	1940-48 all PLYMOUTH	1940-48 all DODGE	1940-48 all DESOTO	1940-48 all CHRYSLER
706-196 Cowl Vent Seal	1	1949-52 all PLYMOUTH	1949-52 all DODGE	1949-52 all DESOTO	1949-52 all CHRYSLER
706-199 Cowl Vent Seal	1	1953-54 all PLYMOUTH	1953 D47, D48 1954 D52, D53		
706-200 Cowl Vent Seal	1		1953 D44, D46 1954 D50, D51		
706-198 Cowl Vent Seal	1			1953-54 all DESOTO	1953-54 all CHRYSLER
706-165 Cowl Vent Seal	1	1955-56 all PLYMOUTH	1955-56 all DODGE		
706-198 Cowl Vent Seal	1			1955-56 all DESOTO	1955-56 all CHRYSLER all IMPERIAL


## HOOD-TO-COWL WEATHERSTRIP

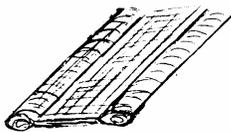

**706-096**  
Fabric Lacing  
1930-50 all

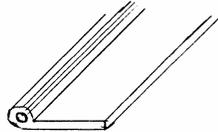


**706-108**  
Rubber Lacing  
1951-54 all

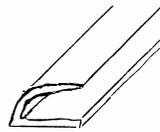


**706-300**  
1955 all  
1956 PLYMOUTH, DODGE




**825-454 (PKG 20)**  
1930-54  
Cowl Lacing Nails

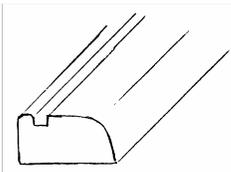

**706-508**  
1956 DESOTO, CHRYSLER,  
IMPERIAL

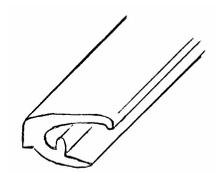

**706-161**  
1957-59  
exc IMPERIAL

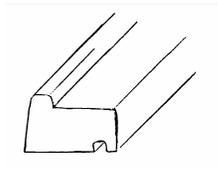

**706-107**  
1957-59  
IMPERIAL