


BALL & PIN TYPE U-JOINTS

A+B: REPAIR PACKAGE

B: BOOT ONLY

C: BODY

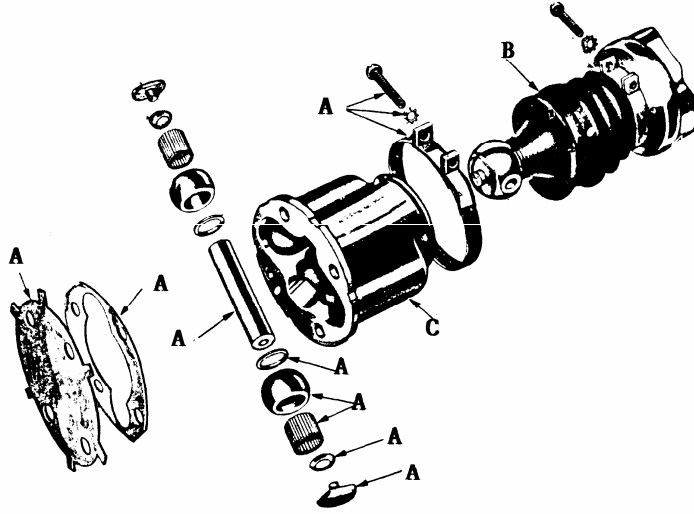

ATLAS P/N	QTY REQ	PLYMOUTH	DODGE	DESOTO	CHRYSLER/ IMPERIAL
817-051 Repair Package 806-306 Boot Only 817-103 Body	2 2 2	1935-54 all PLYMOUTH 1955-56 6-cylinder	1935-52 all DODGE 1953-56 6-cylinder	1937-40 all DESOTO	1937-40 6-cylinder
817-056 Repair Package 806-713 Boot Only 817-111 Body	1 1 1			1955-56 Firedome Estate Wagon Fireflite	1953-54 8-cylinder 1955-56 Windsor some IMP, NYkr, 300
817-051 Repair Package 806-309 Boot Only 817-222 Body	1 1 1	1955 8-cylinder 1956 exc Fury	1955 8-cylinder 1956 D62-1	1955 Firedome exc wagon	1955 Windsor exc wagon
817-055 Repair Package 806-713 Boot Only 817-112 Body	1 1 1	1956 P29 Fury	1956 D63-2, D63-3	1956 Freedom exc Est Wagon	1956 Windsor some
817-051 Repair Package 817-309 Boot Only 817-107 Body	1 1 1	1957-59 w/o Torqueflite 1960-61 PP1, PP2 w/o Torqueflite Valiant	1957-59 w/o Torqueflite 1960-61 PD1, PD3, PD4 w/o Torqueflite Lancer	1957-59 w/o Torqueflite	1957-59 w/o Torqueflite
817-016 Repair Package 806-310 Boot Only 817-108 Body	1 1 1	1957-59 w/ Torqueflite	1957-59 w/ Torqueflite	1957-59 w/ Torqueflite	1957-59 w/ Torqueflite