


BATTERY HOLD-DOWNS BATTERY TRAYS

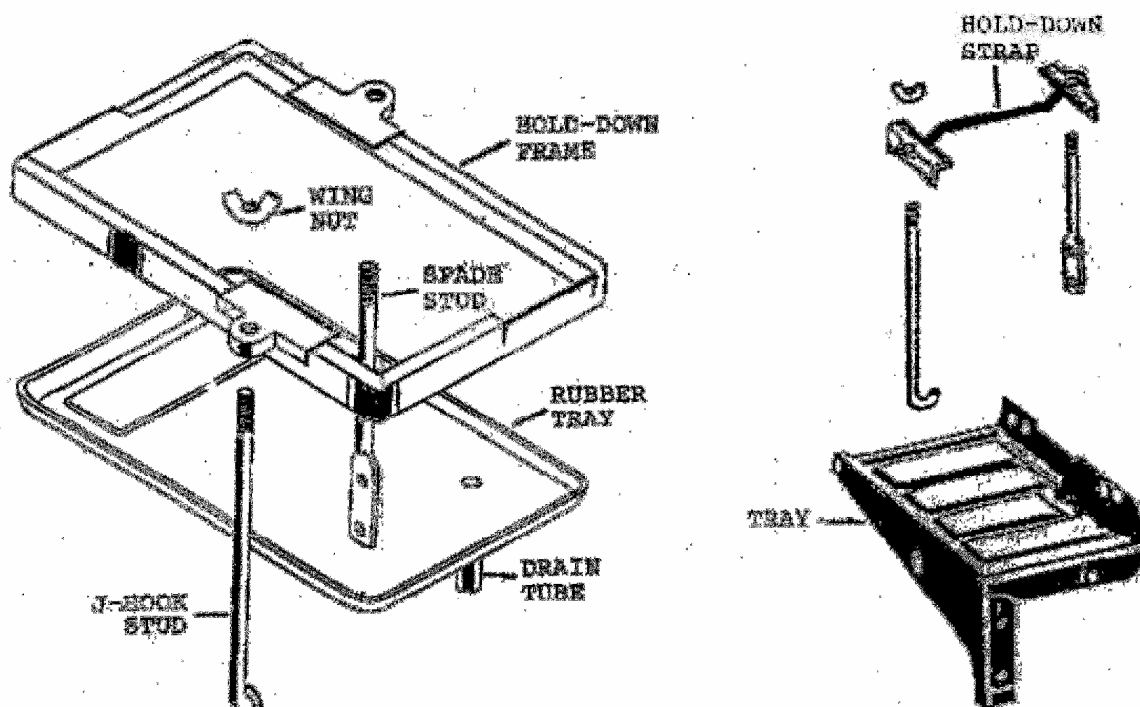

ATLAS P/N	QTY REQ	PLYMOUTH	DODGE	DESOTO	CHRYSLER/ IMPERIAL
701-013 HOLD-DOWN FRAME	1	1935-40 all PLYMOUTH	1935-40 all DODGE	1935-40 all DESOTO	1935-40 all CHRYSLER
701-009 HOLD-DOWN FRAME (GROUP 1 BATT)	1	1941-48 all PLYMOUTH	1941-48 all DODGE	1941-48 all DESOTO	1941-48 all CHRYSLER
701-010 HOLD-DOWN FRAME (GROUP 2 BATT)	1				
725-001 SPADE STUD	1				
725-002 J-HOOK STUD	1				
825-284 WING NUT	2				
701-017 BATTERY TRAY (GROUP 1 BATT)	1				
701-018 BATTERY TRAY (GROUP 2 BATT)	1				
810-097 DRAIN TUBE	1				
701-009 HOLD-DOWN FRAME (GROUP 1 BATT)	1	1949-52 all PLYMOUTH	1949-52 all DODGE	1949-52 all DESOTO	1949-52 all CHRYSLER
701-010 HOLD-DOWN FRAME (GROUP 2 BATT)	1				
725-001 SPADE STUD	1				
725-002 J-HOOK STUD	1				
825-284 WING NUT	2				
701-016 BATTERY TRAY	1				
810-097 DRAIN TUBE	1				
701-009 HOLD-DOWN FRAME (GROUP 1 BATT)	1	1953-54 all PLYMOUTH	1953-54 all DODGE	1953-54 all DESOTO	1953-54 all CHRYSLER
701-010 HOLD-DOWN FRAME (GROUP 2 BATT)	1				
725-001 SPADE STUD	1				
725-002 J-HOOK STUD	1				
825-284 WING NUT	2				
701-009 HOLD-DOWN FRAME (GROUP 1 BATT)	1	1953-54 all PLYMOUTH	1953-54 all DODGE	1953-54 all DESOTO	1953-54 all CHRYSLER
701-010 HOLD-DOWN FRAME (GROUP 2 BATT)	1				
725-001 SPADE STUD	1				
725-002 J-HOOK STUD	1				
825-284 WING NUT	2				

**BATTERY HOLD-DOWNS
BATTERY TRAYS
CONT'D**

ATLAS P/N	QTY REQ	PLYMOUTH	DODGE	DESOTO	CHRYSLER/ IMPERIAL
701-011 HOLD-DWN FRAME (GROUP 1 BATT)	1	1955 all PLYMOUTH	1955 all DODGE	1955 all DESOTO	1955 all CHRYSLER
701-012 HOLD-DWN FRAME (GROUP 2 BATT)	1				
725-001 SPADE STUD	1				
725-002 J-HOOK STUD	1				
825-284 WING NUT	2				
801-011 RUBBER TRAY	1				
810-075 DRAIN TUBE	1				
701-001 HOLD-OWN FRAME (GROUP 24 BATT)	1	1956-58 all PLYMOUTH	1956-58 all DODGE	1956-58 all DESOTO	1956-58 all CHRYSLER
701-002 HOLD-DWN FRAME (GROUP 27 BATT)	1				
725-001 SPADE STUD	1				
725-002 J-HOOK STUD	1				
825-284 WING NUT	2				
801-011 RUBBER TRAY (GROUP 24 BATT)	1				
801-012 RUBBER TRAY (GROUP 27 BATT)	1				
810-075 DRAIN TUBE	1				
801-021 HOLD-DWN STRAP	1	1959 all PLYMOUTH	1959 all DODGE	1959 all DESOTO	1959 all CHRYSLER
725-001 SPADE STUD	1				
725-002 J-HOOK STUD	1				
825-284 WING NUT	2				
801-011 RUBBER TRAY (GROUP 24 BATT)	1				
801-012 RUBBER TRAY (GROUP 27 BATT)	1				
810-075 DRAIN TUBE	1				