

## SHOCK ABSORBERS


### FRONT

ATLAS P/N	QTY REQ	PLYMOUTH	DODGE	DESOTO	CHRYSLER/ IMPERIAL
863-017 FRONT SHOCK	2	1937-38 all PLYMOUTH	1937-38 all DODGE		
863-003 FRONT SHOCK	2	1939-50 all PLYMOUTH	1939-50 all DODGE	1938-50 all DESOTO	1938-50 all CHRYSLER
863-002 FRONT SHOCK	2	1951-54 all PLYMOUTH	1951-54 all DODGE	1951-54 all DESOTO	1951-54 all CHRYSLER
863-005 FRONT SHOCK	2	1955-56 all PLYMOUTH	1955-56 all DODGE		
863-016 FRONT SHOCK	2			1955-56 DESOTO	1955-56 all CHRYSLER all IMPERIAL
863-006 FRONT SHOCK	2	1957-59 all PLYMOUTH	1957-59 all DODGE	1957-59 all DESOTO	1957-59 all CHRYSLER all IMPERIAL

### REAR

ATLAS P/N	QTY REQ	PLYMOUTH	DODGE	DESOTO	CHRYSLER/ IMPERIAL
863-018 REAR SHOCK	2	1937-38 all PLYMOUTH	1937-38 all DODGE	1937 all DESOTO	1937 all CHRYSLER
863-019 REAR SHOCK	2			1938 all DESOTO	1938 all CHRYSLER
863-004 REAR SHOCK	2	1939-50 all PLYMOUTH	1939-50 all DODGE	1939-50 all DESOTO	1939-50 all CHRYSLER
863-001 REAR SHOCK	2	1951-54 all PLYMOUTH	1951-54 all DODGE	1951-54 all DESOTO	1951-54 all CHRYSLER
863-008 REAR SHOCK	2	1955-59 all PLYMOUTH	1955-59 all DODGE	1955-59 all DESOTO	1955-59 all CHRYSLER all IMPERIAL


## SHOCK ABSORBER BUSHINGS

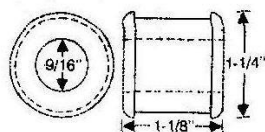


801-345




801-346

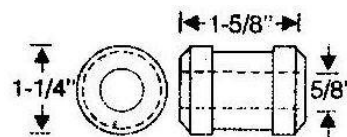

801-347

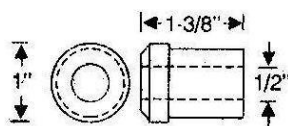

801-348

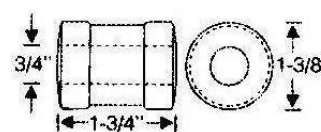

860-187